

FUEL CELL CROSS REFERENCE

Original Part #	Old	Old	New	Description	Rev.
630060-507	-509	630060-513	-517	R/B FUEL CELL	AN
630060-508	-510	630060-514	-518	R/B FUEL CELL	AN
630060-501	-511	630060-515	-519	R/B FUEL CELL	AN
630060-502	-512	630060-516	-520	R/B FUEL CELL	AN
630061-507	-509	630061-513	-517	FUEL CELL, INBD AFT	AR
630061-508	-510	630061-514	-518	FUEL CELL, INBD AFT RH	AR
630061-501	-511	630061-515	-519	FUEL CELL, INBD AFT	AR
630061-502	-512	630061-516	-520	FUEL CELL, INBD AFT RH	AR
630062-507	-511	630062-513	-515	FUEL CELL, CTR UPPE	AL
600063-507	-509	630063-513	-517	FUEL CELL, OTBD FWD LH	AK
600063-508	-510	630063-514	-518	FUEL CELL, OTBD FWD RH	AK
600063-503	-511	630063-515	-519	FUEL CELL, OTBD FWD LH	AK
600063-504	-512	630063-516	-520	FUEL CELL, OTBD FWD RH	AK
600064-507	-511	630064-517	-523	FUEL CELL, OTBD AFT LH	AT
600064-508	-512	630064-518	-524	FUEL CELL, OTBD AFT RH	AT
600064-509	-513	630064-519	-525	FUEL CELL, OTBD AFT LH	AT
600064-510	-514	630064-520	-526	FUEL CELL, OTBD AFT RH	AT
600064-501	-515	630064-521	-524	FUEL CELL, OTBD AFT LH	AT
600064-502	-516	630064-522	-528	FUEL CELL, OTBD AFT RH	AT
630204-501	-503	630204-505	-507	FUEL CELL, LOWER CENTER	R
630296-1	-503	630296-507	-509	FUEL CELL, OTBD FWD LH AUX	U
630296-2	-504	630296-508	-510	FUEL CELL, OTBD FWD RH AUX	U
630301-1	-503	630301-507	-511	FUEL CELL, AUX, AFT. INB'D	P
630301-2	-504	630301-508	-512	FUEL CELL, AUX, AFT. INB'D	P
630301-501	-505	630301-509	-513	FUEL CELL,	P
630301-502	-506	630301-510	-514	FUEL CELL,	P
630302-1	-503	630302-507	-511	FUEL CELL, OTBD AFT LH	R
630302-2	-504	630302-508	-512	FUEL CELL, OTBD AFT RH	R
630302-501	-505	630302-509	-513	FUEL CELL, LH	R
630302-502	-506	630302-510	-514	FUEL CELL, RH	R
630304-1	-503	630304-507	-511	FUEL CELL, OTBD FWD LH	N
630304-2	-504	630304-508	-512	FUEL CELL, OTBD FWD RH	N
630304-501	-505	630304-509	-513	FUEL CELL,	N
630304-502	-506	630304-510	-514	FUEL CELL,	N
630307-1	-501	630307-503	-505	FUEL CELL, INBD AFT EXT LH	L
630307-2	-502	630307-504	-506	FUEL CELL, INBD AFT EXT RH	L
630308-1	-501	630308-503	-505	FUEL CELL, INBD FWD EXT LH	L
630308-2	-502	630308-504	-506	FUEL CELL, INBD FWD EXT RH	L
630353-1	-505	630353-509	-511	FUEL CELL	J
630353-2	-506	630353-510	-512	FUEL CELL	J
630354-1	-503	630354-507	-511	FUEL CELL	F
630354-2	-505	630354-509	-513	FUEL CELL	F
630355-501	-505	630355-507	-509	FUEL CELL	H
630355-502	-506	630355-508	-510	FUEL CELL	H
630356-1	-501	630356-503	-505	FUEL CELL	F
630356-2	-502	630356-504	-506	FUEL CELL	F
630393-501	-503	630393-505	-507	FUEL CELL	H
630393-502	-504	630393-506	-508	FUEL CELL	H
630397-1	-503	630397-507	-509	FUEL CELL	L
630397-2	-504	630397-508	-510	FUEL CELL	L